 




Sunrise Alarm Clock Moon Lamp

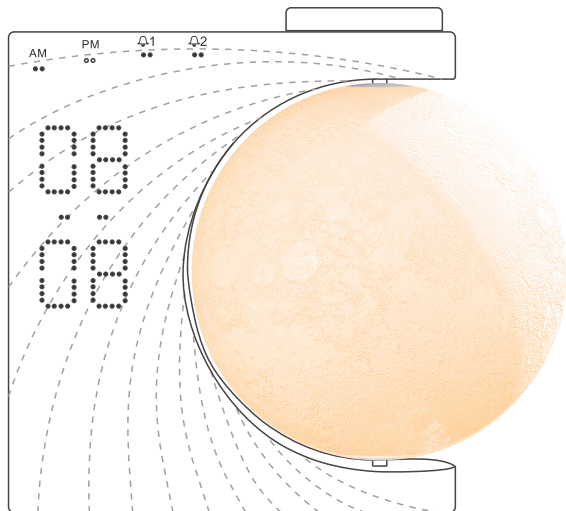

Please read the instructions carefully before use.

Must use the original charger or a high-quality 5V 2A charger to ensure all alarm clock functions operate normally.

Quick Instructions

SNOOZE

In Time mode

Short press: Adjust time display

In Alarm mode

Short press: 10mins snooze

Press 2s: Stop the alarm/snooze

No operation: alarm stop after 30mins



1st press: Turn on warm light

2nd press: Adjust brightness



Short press: Turn on/ adjust colorful lights

Long press: Turn off colorful lights



Short press: Turn on/ off white noise

Rotate: Adjust the volume(V01-V12)

In White Noise Mode



Short press: Choose white noise sound(01-10)



Short press: Set timer of white noise



Light up: Timer is activated



Short press: 12H/24H Switch

Long Press: Time Setting



Short press: View alarm time



Long press: Set alarm time

Quick double click: Turn on/off alarm (🔔2) Only Alarm 2 has a non-cancellable wake-up light mode, moon light will light up slowly 10 minutes before Alarm 2 goes off.

e.g. : If time of alarm 2 is 7:00 AM, the light will turn on at 6:50 AM.

 
Caution:

1. It is recommended to use the original charger or a standard 5V 2A charger to enable all functions of the alarm clock to be activated normally.
2. Only Alarm 2 has a non-cancellable wake-up light mode.

Turn On/Off the Device


1. Plug in to turn on, unplug to shut down.

Note: must use a safety-compliant high-quality 5V 2A charger.

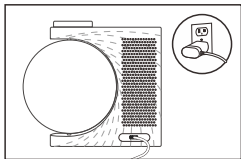

12H/24H Time Format Setting

 
1. Click【🕒】to select the 12H or 24H mode.
2. The AM or PM indicator will light up in the 12H format.

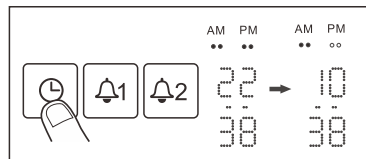

Set Clock Time


1. Long press【🕒】, “hour” flash
2. Rotate【🌀】to adjust hour
3. Short press【🕒】, “minute” flash
4. Rotate【🌀】to adjust minute
5. Short press【🕒】to exit or auto exit after 10s with a beeping sound

 Tips: No operation within 10 seconds will automatically exit the time setting (Other setting is same).

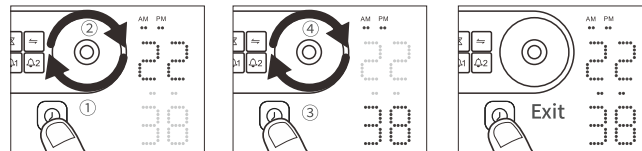

Adjust Brightness of Time Display

 1. In the clock display state, short press the【SNOOZE】button to switch the brightness of the time display.
2. 3 brightness levels: High - Medium - Low - Display Off

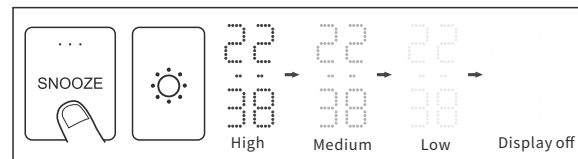

Alarm 1 Setting

Tips:

Short press 【🔔1】 **to view the alarm 1 time.**

Quick double click【🔔1】 **to turn ON/OFF.**

1. Long press【🔔1】, “hour” flash
2. Rotate 【🌀】 to adjust hour
3. Short press【🔔1】, “minute” flash
4. Rotate 【🌀】 to adjust minute
5. Short press【🔔1】to enter the volume setting
6. Rotate 【🌀】to adjust sound volume(V01-V12)
7. Short press【🔔1】to enter the alarm sound setting
8. Rotate 【🌀】to choose sound (01-15)
9. Short press【🔔1】 to exit or auto exit after 10s with a beeping sound

Alarm Sound: 01-05: Morning Melody Ringtone →06: Birdsong
→ 07: Sound of the Wave→ 08: Stream Sound → 09 : Bonfire
→ 10: Summer Night Insect Chirping → 11: Thunder → 12:Fan
→ 13: Rain→ 14: Music Box → 15:Rhythmic Clock Ticking

Alarm 2 Setting & Default Wake-up Light

Tips:

★ **Moon light will light up slowly 10 minutes before Alarm 2 goes off.**

e.g. : If time of alarm 2 is 7:00 AM, the light will turn on at 6:50 AM.

- ★ Short press 【🔔2】to view the alarm 2 time.
- ★ Quick double click【🔔2】to turn ON/OFF.

1. Long press 【🔔2】, “hour” flash
2. Rotate 【🌀】 to adjust hour
3. Short press【🔔2】, “minute” flash
4. Rotate 【🌀】 to adjust minute
5. Short press【🔔2】to enter the volume setting
6. Rotate 【🌀】to adjust sound volume(V00-V12).
(V00: Wake up light without an alarm ring)
7. Short press【🔔2】to enter the alarm sound setting
8. Rotate 【🌀】to choose sound (01-15)
9. Short press【🔔2】 to exit or auto exit after 10s with a beeping sound

Alarm Clock ON/OFF

1. Quick double click【🔔1】or【🔔2】to turn ON/OFF the corresponding alarm clock.

Tips:

Short press 【🔔1】or【🔔2】to view the alarm 1 or alarm 2 time.

Snooze

1. When the alarm 1 sound rings, click 【SNOOZE】 to start snooze, the sound stop and【🔔1】indicator light flashes until the sound rings again after 10 minutes.
2. When the alarm 2 sound rings, click 【SNOOZE】 to start snooze, the alarm sound stop and【🔔2】indicator light flashes, the moon lights gradually light up again, the sound rings again after 10 minutes.

3. The alarm can be snoozed 3 times, after which the alarm will be completely turned off for the day.
4. If no button is pressed when the alarm sounds, the alarm will be automatically turned off after 30 minutes.

 
Stop Alarm or Snooze

When the alarm 1 or alarm 2 sounds, or during snooze,
You can:

1. **Long press the snooze button for 2 seconds (recommend)**
2. Or, short press the corresponding alarm 1 and alarm 2 button to turn off the alarm for that day.

Set White Noise Sound


1. Short press【 ◎ 】to turn on/off the white noise
2. Short press【 ⇌ 】to choose sound(01-10)
3. Rotate【 ◎ 】to adjust sound volume(V01-V12)

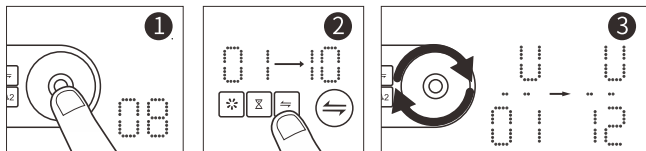

- | | | |
|-------------|----------------------|---------------------------|
| 01 Birdsong | 02 Sound of the Wave | 03 Stream Sound |
| 04 Bonfire | 05 Inspect Chirping | 06 Thunder |
| 07 Fan | 08 Rain | 09 Music Box |
| | | 10 Rhythmic Clock Ticking |

Timer Setting of White Noise

 1. Press【 ◎ 】to turn on the white noise
2. Press【 ⌂ 】to choose 30mins, 60mins, 90mins and OFF
 - ★ The default setting for white noise is long play.
 - ★ Setting a white noise timer is only valid once.

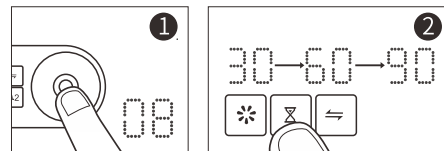


Cancel the ongoing white noise timer

Short press【 ◎ 】, the indicator light turns off and the timer becomes invalid.

Tips:

 1. When you select the 30mins, 60mins or 90mins timer, the indicator light will light up, and the timer will automatically save and exit after 3s with a beeping sound.

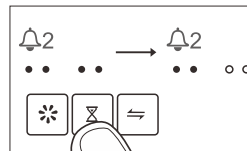

2. When you select OFF, it means you turn off the timer mode and switch to the default long play.

Night Light

1. Short press 【】 to turn on / off the night light
2. Short press 【】 again to adjust the brightness
3. 3 levels of brightness & 2 states adjustable:

lowest - medium - maximum - breathing mode - turn off the light

Note:

- ★ If you press the 【】 within 30 seconds, the levels of brightness will be switched in sequence.
- ★ If you press the 【】 after more than 30 seconds, the night light will be turned off.

Colorful Ambient Lights

1. Short press 【】 to turn on the colorful light
2. Short press 【】 again to choose the color
3. Long press 【】 to turn off the colorful light
4. 10 Colorful Ambient Light : Scrolling Colors→Color Cycling→Red→Orange→Yellow→Green→Cyan→Blue→Pink→White

Power-off Memory Function

After unplugging the DC power supply or power failure, all functions stop responding, but the time continues to run by default (it can still be maintained for about 3 hours after power failure).

When the power is turned on again within 3 hours, the time will be displayed normally.

Product Parameter

Model Number	AJ320A
Colour Temperature	3000K+250K
Natural Sound Loudness	80dB
Speaker Specification	Φ40mm 4Ω 3W
Power Input	5V 2A
Night Light Power	1W
Colour Light Power	1.5W
Product Size	165X110X155mm

After-Sales Service

We'd like to address any issues or concerns you have.

Your suggestion is important to us so please contact us if you have any problems.

You can activate 1-year warranty and contact us by email.

airivo@outlook.com